



Outdoor TV



USER'S MANUAL

Safety Information

IMPORTANT SAFETY INSTRUCTIONS

Read these instructions.
Keep these instructions.
Heed all warnings.
Follow all instructions.
Do not use this apparatus near water.
Clean only with dry cloth.
Do not block any ventilation openings. Install in accordance with the manufacture's instructions.
Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
Only use attachments/accessories specified by the manufacturer.
Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



Unplug the apparatus during lightning storms or when unused for long periods of time.

Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

WARNING : To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.

WARNING: The mains plug is used as disconnect device, the disconnect device shall remain readily operable.



- This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

- Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.

- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

Apparatus with class I construction shall be connected to a mains socket outlet with a protective earthing connection.

Content

| | |
|-------------------------------------|-------|
| TV Specification | 1 |
| Installation | 2~4 |
| Overview of back panel | 5 |
| Remote-Control unit | 6~8 |
| Main Menu User Guide | |
| Main menu on TV | 9~14 |
| Picture | 15~16 |
| Sound | 17~18 |
| Advance | 18~20 |
| Personal Video Recorder (PVR) | 21~23 |
| Launcher app | 24 |
| Media Center | 25~32 |
| Troubleshooting | 33 |

TV Specification

| | |
|------------------------|-----------------------|
| Screen size | 43" |
| Display Type | TFT LED |
| Resolution | 3840 X 2160 |
| Aspect Ratio | 16:9 |
| Alimentation | AC 100-240V 50/60Hz |
| Audio Output | L/R 10W X 2 |
| Dimensions(With stand) | 981.6 x 590.6 x 91 mm |

| | |
|------------------------|------------------------|
| Screen size | 55" |
| Display Type | TFT LED |
| Resolution | 3840 X 2160 |
| Aspect Ratio | 16:9 |
| Alimentation | AC 100-240V 50/60Hz |
| Audio Output | L/R 10W X 2 |
| Dimensions(With stand) | 1251.7 x 748.7 x 91 mm |

| | |
|------------------------|----------------------|
| Screen size | 65" |
| Display Type | TFT LED |
| Resolution | 3840 X 2160 |
| Aspect Ratio | 16:9 |
| Alimentation | AC 100-240V 50/60Hz |
| Audio Output | L/R 10W X 2 |
| Dimensions(With stand) | 1471.3 x 868 x 91 mm |

Note:

Design and specification modification maybe made at any time without prior notice, all data and dimensions are approximations.

Installation



Screen size
43"/55"/65"



Capacity
50Kg



VESA
600 x 400mm

Warning - Please read before installation

Please thoroughly read instructions before attempting installation

The bracket supplied is only suitable for the 43"-65" Outdoor TVs

 
We advise that 2 people install the screen due to the heavy load of the screens

Please be sure the mounting surface is strong enough to hold the weight of the screen

Installation


Step1—Mounting Bracket to Wall

Attach back plate to wall using supplied screws.

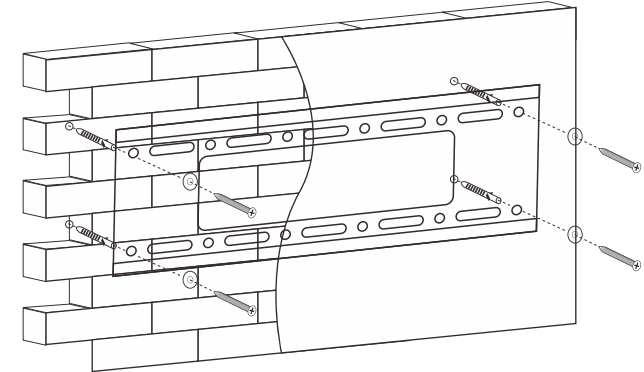

Step2—Mounting Hooksto TV

 
Remove 4 x screws from back of the TV, line hooks up with the holes and attach hooks to back of TV using these crews.

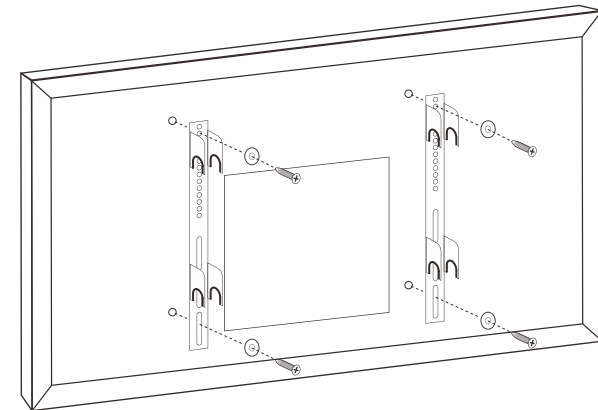

Installation



Step3—Mounting TV to Bracket

 Mount TV to wall bracket by lining up hooks with the poles and then lock in to place.

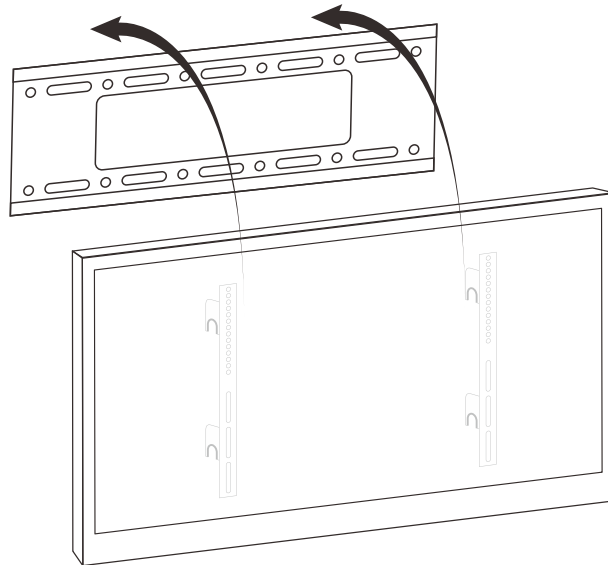

| | |
|---------------|----------------------------|
| VESA Standard | 43"/55"/65" 600 x 400mm |
|---------------|----------------------------|

  Overview of back panel

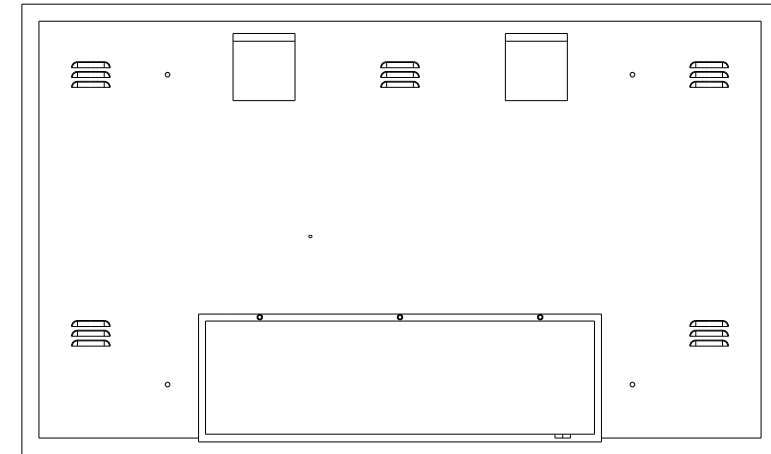

1. AC 100-240V 50/60Hz

2. R/L

Connect to the audio output jacks on your amplifier/home theater.

3. HDMI 3

Connecting for HDMI device.

4. HDMI 2

Connecting for HDMI device.

5. USB1/2

Connecting for USB device.

6. EARPHONE

Connecting for headphone.

7. MINI AV

Connecting for VIDEO signal input in Composite mode.

8. CI SLOT

Used to insert the CI card.

9. MINI YPBPR

Connecting for the Y/Pb/Pr Input in Component mode.

10.USB3

Connecting for USB device.

11.DVB-T2

Connected to external antenna to receive the ATV/DTV program in ATV/DTV mode.

12.DVB-S2

Connected to external SATELLITE to receive.

 
13.HDMI 1

Connecting for HDMI Signal or ARC or Majestic Link.

14.RJ45

Ethernet connection for.

Remote-Control unit

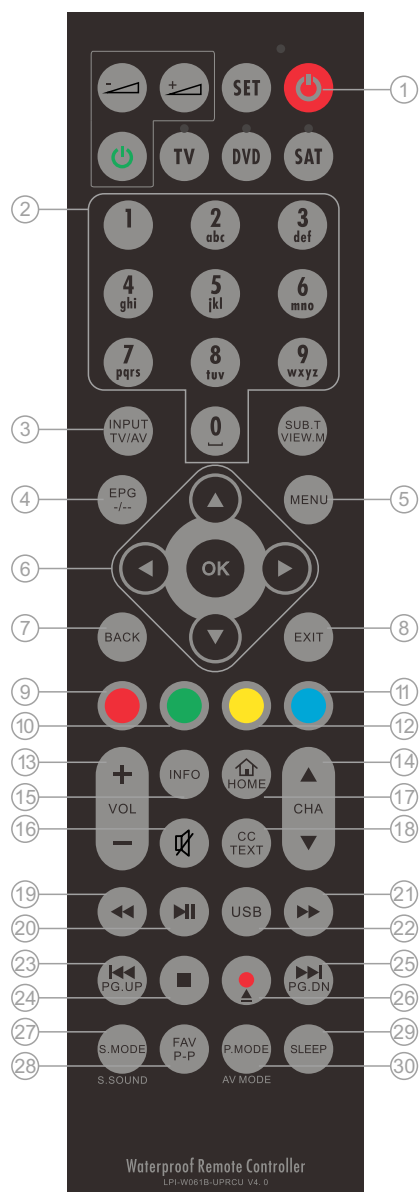


| No. | Button | Description |
|-----|-------------|--|
| 1 | | Turns the TV on or off to standby mode. |
| 2 | 0-9 | Press 0-9 to select a TV channel directly. The channel will change after 2 seconds. |
| 3 | INPUT TV/AV | Press to display the source and channel info. |
| 4 | EPG | Press to display EPG (Electronic Program Guide). |
| | -/-- | Select NICAM audio mode. Only be available for TV programmers with NICAM transmission, and default mode is mono. |
| 5 | MENU | Allows you to navigate the on screen menus (OSD). |
| 6 | ◀ ▶ ▲ ▼ | Allows you to navigate the on-screen menus and adjust the system settings to your preference. |
| | OK | Select the option. |
| 7 | BACK | Back to the parent menu. |
| 8 | EXIT | Exit from the current menu or sub-menu. |
| 9 | R (DELETE) | Delete function button. |
| 10 | G (RENAME) | Rename function button. |
| 11 | B (SKIP) | Skip function button. |
| 12 | Y (MOVE) | Move function button. |
| 13 | VOL +/- | Press these two buttons to increase/decrease the volume. |
| 14 | CHA +/- | Press these two buttons to change channels up/down. |
| 15 | INFO | Displays the channel information. |
| 16 | | Press to mute the sound. Press again to regain sound. |
| 17 | HOME | Return to the home page. |
| 18 | CC/TEXT | Press to display the closed caption. |
| 19 | ◀◀ | Fast Rewind Media-Player and DVD. |
| 20 | ⏸ | Play and Pause Media-Player / DVD. |

| No. | Button | Description |
|-----|------------|--|
| 21 | ▶▶ | Fast Forward Media-Player and DVD. |
| 22 | USB | Press this button to enter the USB channel. |
| 23 | ◀◀ | Plays the previous Media Player or DVD file/chapter. |
| 24 | ■ | Stops playback Media-Player and DVD. |
| 25 | ▶▶ | Plays the next Media Player or DVD file/chapter. |
| 26 | ● | Press to record the program immediately. |
| 27 | S.MODE | Select the sound mode. |
| 28 | FAV P-P | Press to display the favorite programs. |
| 29 | SLEEP | Set the delay time for the TV to turn off automatically. |
| 30 | P.MODE | Select the picture mode. |

Main Menu User Guide

Main menu on TV

 Channel
Main menu items(from right order Channel->Picture->Sound->Advance) at DTV/ATV input source.The first item is Channel page as default. Now ,press right key to enter the sub page,Auto Tuning is highlighted . In this page, we have four subltems: Auto Tuning, Mannual Tuning ,program guide (this item is only showed in DTV channel),program Edit . Channel menu:

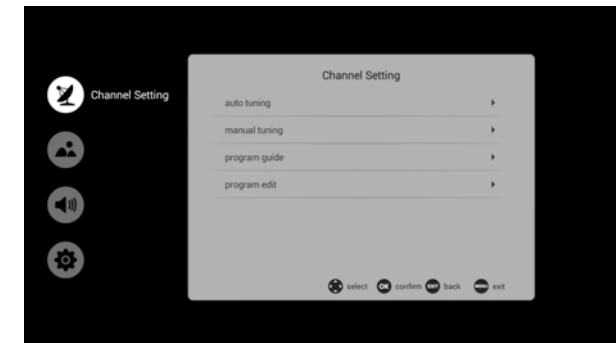

Auto Tuning
Enter Auto Tuning ,there is a dialog to choose atv auto tuning ,dtv auto tuning or ATV /DTV auto Tuning . Enter it and we can see a view of searching tv program in ATV or DTV automatically.



Picture 2:DTV Tuning picture



Picture 3: ATV/DTV Tuning picture




Function Description: Auto Tuning is searching all the proper program from your RF source .

| Column | Descriptions |
|----------|---------------------------------------|
| ATV | The number of Atv program |
| DTV | The number of Dtv program |
| Ratio | The number of program contains Ratio |
| Data | The number of program contains Data |
| Progress | Bar The progress of searching process |

Note :
Press Exit to finish Tuning process.

 Manual Tuning
Manual Tuning contains Atv Manual Tuning and Dtv Manual Tuning
Atv Manual Tuning :

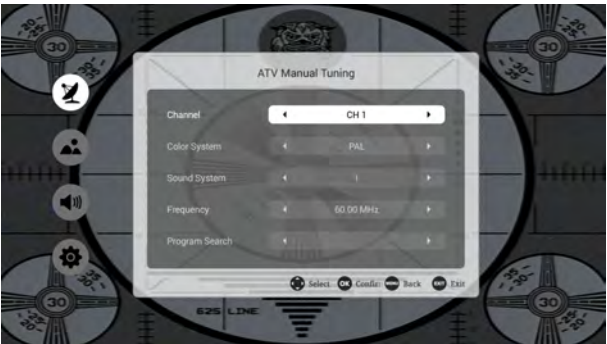

Function Description:

| Item | Adjust Item | Default | Description |
|----------------|---------------------|---------|------------------------------|
| Channel | 1-100 | 1 | Current channel shows |
| Color System | PAL,NTSC,SECAM,AUTO | PAL | Program color system |
| Sound system | I,L,M,N,BG,DK | I | Program sound system |
| Frequency | 40-100mhz | | Channel frequency size |
| Program Search | | | Start or stop channel search |

DTV Manual Tuning




Antenna Type



Function Description


| Item | Description |
|-------|------------------|
| DTMB | Set DTMB format |
| Cable | Set Cable format |

 Country(only shows in DTV)

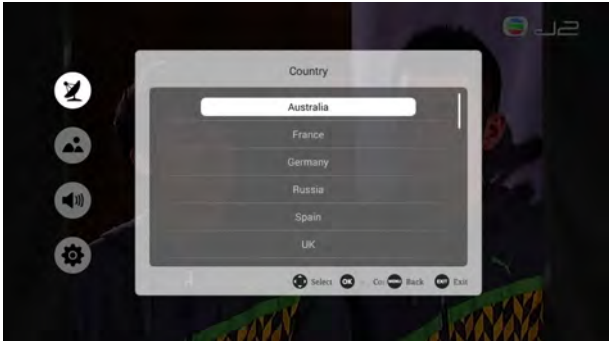


Function Description:
Set Tuning Country

 Channel Lock(only shows in DTV)

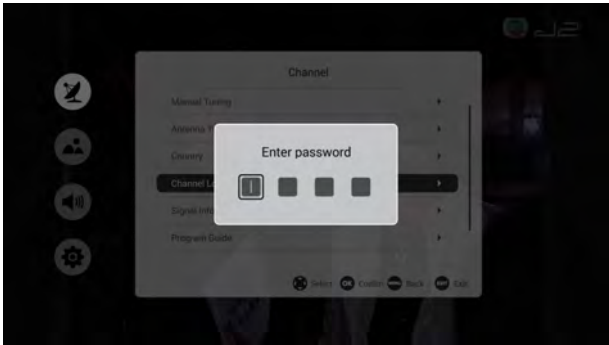


Function Description:
Make the channel locked/unlocked.

 
Signal Information(only shows in DTV)

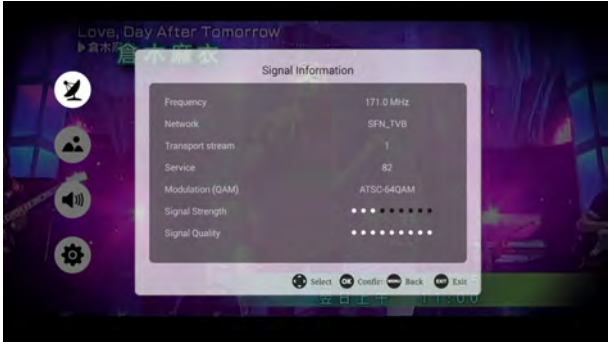


Program guide (EPG only shows in DTV)

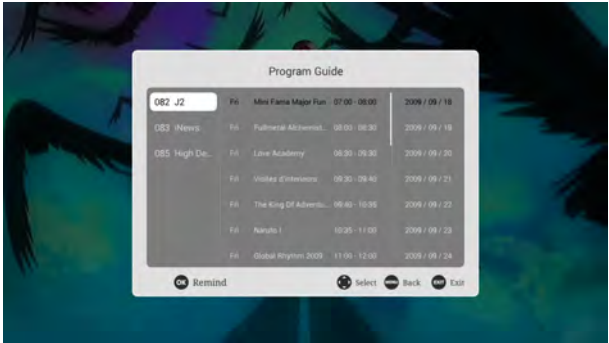 

Function Description:
Program Guide also means EPG(Electronic program guide),it provide all the television program information in a period time .In this EPG, it has three column: channel ,program in 24hours ,date.You can choose different channel and different date,then you can get the respond program in due channel due date,which is from 00:00 to 24:00
EPG also has the function of operating program , which is remind function. press keyOk in program column ,then you could remind this program in program guide dialog as follow:

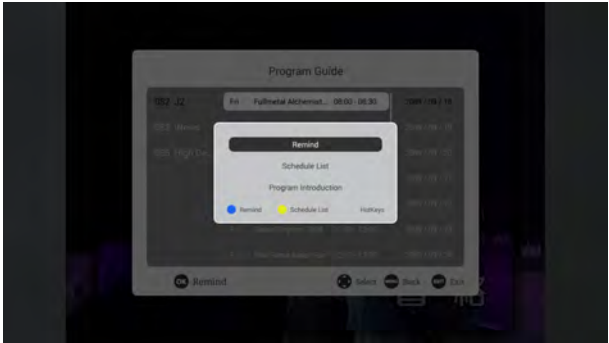 

 Just press remind ,then at due time ,you could get a remind message at your TV.
Schedule list is a channel list that show the programs which you have remind.

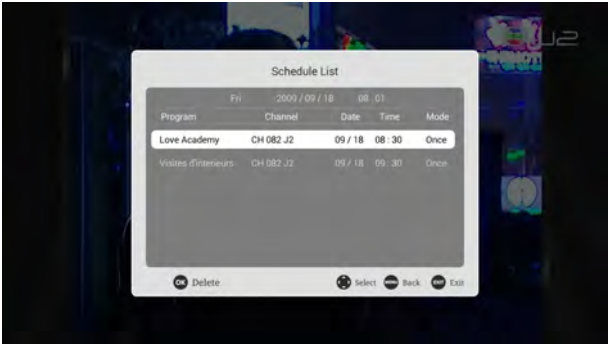

Program Edit



The program Edit shows basic info of all tv program .Press the enter key,the new dialog provides some tools to set program properties ,such as Favorite ,delete and skip .
Program Edit dialog picture:



Key press Operation introductions

| Key | Range | Description |
|----------|---------|---|
| Favorite | ATV/DTV | Set your favorable channel |
| Delete | ATV/DTV | Delete the current channel |
| Skip | ATV/DTV | Choose if skip the current channel when CH+/- channel tuning. |


Picture
Picture mode



Function Description:

| Item | Adjust Range | Default | Description |
|--------------|--|----------|--|
| Picture mode | Standard->user->Lightness ->soft->vivid->Natural ->sport | Standard | Change the different picture mode to change the real picture Effect in non user mode |

 
User mode

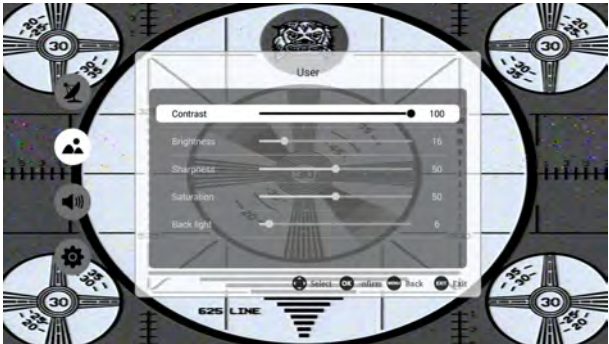


User mode Description:
The page in user mode provide the user to adjust picture parameter to achieve their prefer image quality.

| Item | Description |
|------------|--------------------------------------|
| Contrast | Adjust contrast for user operation |
| Brightness | Adjust Brightness for user operation |
| Sharpness | Adjust sharpness for user operation |
| Saturation | Adjust saturation for user operation |
| Back light | Adjust Back light for user operation |

 Color Temperature :
Color Temperature picture;

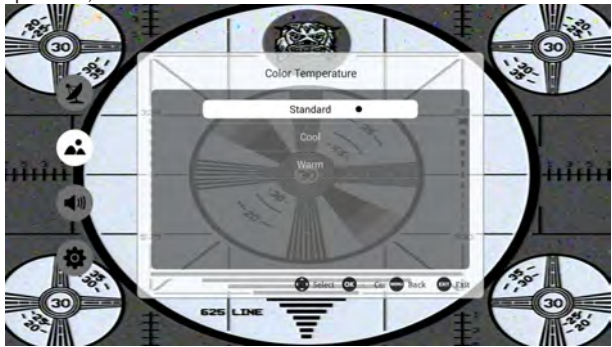

 Function Description :
Like picture mode ,color temperature is also the factor that influence the final image quality. It provides 3 different color Temperature: Standard ,cool ,warm.
Image Noise Reduction

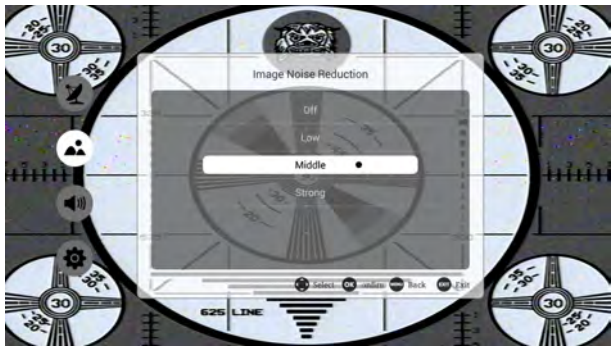

Function Description:
Image Noise Reduction is the Function that reduce image noise and improve picture quality.

| Item | Description |
|--------|--|
| OFF | Close Image Noise Reduction Function |
| Low | Set Image Noise Reduction level low |
| Middle | Set Image Noise Reduction level middle |
| Strong | Set Image Noise Reduction level Strong |

Zoom mode
Function Instruction

| Input source | Panel resolution |
|--------------|---------------------------------------|
| ATV/DTV | 16:9,4:3,Auto, Zoom1, Zoom2 |
| HDMI | 16:9,4:3,Auto, Just Scan, Zoom, Zoom2 |
| VGA | 16:9,4:3 |

Sound
Sound system



Function and Description;

| Item | Adjust Range | Default | Description |
|------------|--|----------|--|
| Sound mode | Standard->user->Music ->Movie->Sports | Standard | Change the different sound mode to change the real sound Effect in non user mode |

Sound user mode



Function Description:

| Column | Description |
|--------|--|
| Bass | Adjust low sound Effect(0-600HZ) |
| Treble | Adjust high sound Effect (more 1000HZ) |

Operation instruction:
Adjust: LEFT,RIGHT control data size.

Balance
Balance picture



Operation instruction:
Adjust sound balance: LEFT,RIGHT control data size.

AVC/Surround



Function Declaration :
The switch of open or close AVC ,Surround.

SPDIF OUT



Function Description:
SPDIF OUT is make the sound from AV port flows than speaker

| | |
|-----|---------------------------------|
| PCM | Make the sound out in PC |
| RAW | MMake the sound out in RAW |
| OFF | Close the function of SPDIF OUT |

Alone
Function Declaration :
Alone means listen only, if you want to just listen the program, choose it and the screen will black.
Note : Press “menu” can cancel Alone state.

Advance
Menu time



| | | | |
|-----------|--------------------------------|---------|---------------------------|
| Item | Adjust Range | Default | Description |
| Menu time | 5s->10s->15s->20s->30s->Always | 5s | Change the menu stay time |

Sleep Time



Function Description:

| Item | Adjust Range | Default | Description |
|------------|--|---------|--|
| Sleep time | Off->10Min->20Min->30Min->60Min->90Min->120Min->180Min->240Min | Off | Change the menu sleep time (if you choose 20 min, then the tv will shut down after 20 min) |

Blue Screen
Function Description :
Blue Screen on: set tv background Blue Screen.
Store mode picture.
Store Mode
Store Mode on : show the store mode picture.

 


Restore To Default
Restore To Default picture.



Function Description: reset all menu state to default, such as Menu time to default value(5s).

Input source Menu

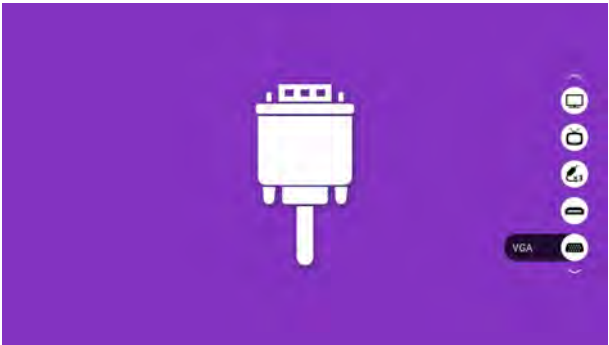

Function Description:
In TV interface, if you want to change channel, you can press the source key to launch tv source change application to select different channels.
Note:
Press “source”to launch input source menu and then up/down/Ok to select correct Input source.

EPG

Function Description:
It is the same as program Guide interface.

Channelist



Function Instruction:
All tv channel shows in a list menu.

Personal Video Recorder (PVR)


PVR file system
PVR function is only available for DTV, includes Record, Timeshift and Playback function. Recording includes in time record and preserve record. In-time record can be worked through short-cut key immediately, and preserve record need to preserve before. Record and Playback can be done of the same time, that means record DTV and playing USB equip at the same time. Timeshift is another function for both record and playing together. The follows it would explain in details.
Enter PVR from CHANNEL menu, as follows:



Function Description:

| Item | Description |
|---------------------------------|---|
| Select Disk | Choose the disc to store whatever content need record |
| Speed check | Check usb speed |
| Format | Storage format |
| Recode list (shortcuts “index”) | The list of record program |
| Video record(shortcus “Record”) | Start record |

 Speed check: Check storage equipment PVR File System is well established. Default as Start, OK/Enter and Right key to inspect the USB files system and speed, the processing shows Checking...; When no inserting USB, or inspection failed, it shows FAIL; When inserting USB but didn't pass MStar Format, enter Format menu; When inserting USB but inspecting unnormal no partition, it shows No Partition
Format: At Format, press OK/Enter or Right key to start Checking PVR File System, after confirmed USB equip information, it pop out Format Disk menu as follows:
Picture

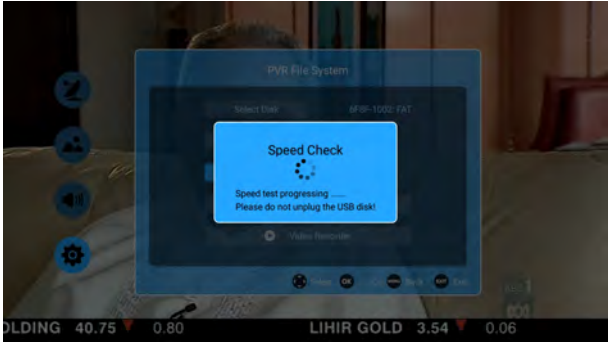

Channel - Recorder List 1) pattern for reference The menu is as follows,

Picture



Menu(shortcut key) Function Description:

| Menu | Description |
|--------|---|
| Ascend | Select forward |
| Sort | Change the order in list based on LAN or time |
| Delete | Delete program in record list |

PVR –Record Mode
simple mode ,



Note:
Simple mode just shows the REC and record time.
all mode

Picture



Note:
All record mode shows REC and Time shift.

Time shift
Function Description



Function Description:
Timeshift menu Timeshift is similar with Record menu, includes two kinds: one is Full Mode and the other is Simple Mode. They can switch by Exit key. At Timeshift mode, Timeshift keeps still.


| Key | Function |
|-----------|--|
| Pause | Start timeshift play |
| Stop | Stop Timeshift mode |
| Rev | Return to Timeshift Play condition and previous playing for 30 seconds; If previous to Timeshift recorded content, play it from this place |
| FF | Return to Timeshift Play condition and next playing for 30 seconds; If previous to Timeshift recorded content, play it from this place |
| Timeplay | At Timeshift Play condition, the system record DTV and play it at the same time. |
| Backward | Fast Rewin |
| Forward | Fast Forward |
| A-B | A->B circle signs, when mark A or B, highlight showings, which only show at play condition. |
| Slow Down | Play slow down |

Launcher app


The basic four application in our system is AppManager, Media Center, FileManager , Settings. They are providing the most common function of manager the tv system in launcher, such as file operater, music,application installer or uninstaller.



 FileManager

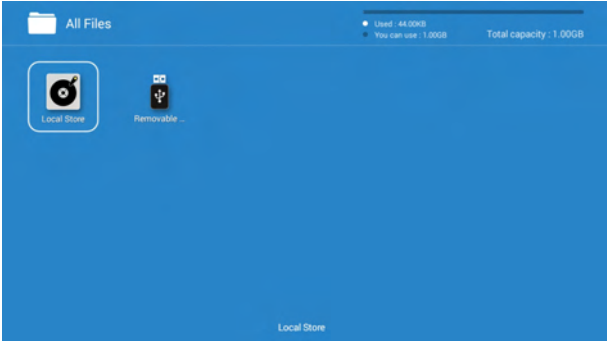


 Function Description :The filemanager is used to show and operater all files in local store and USB.You can perform file operations by menu key ,the file operation include delete, copy, paste ,etc.

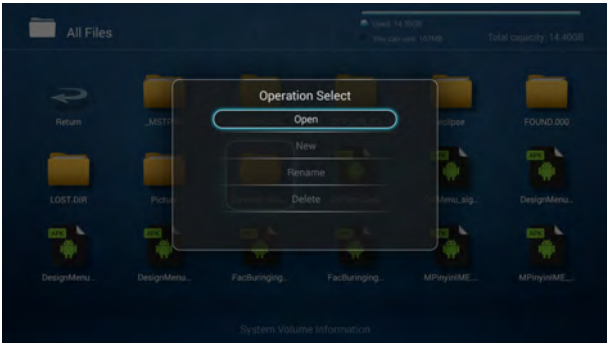

Media Center

 Video in media center

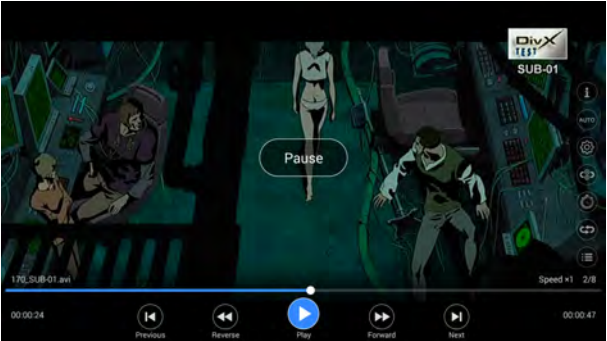

Left Icon picture:



Function Description:

| Icon | Name | Descriptions |
|------|--------------------|---|
| | Video Informations | Show the information of vedio which is playing, like Filename ,file formation |
| | Aspect ratio | Adjust video resolution |
| | Play set | Set breakpoint ,subtitles and track number |
| | Play back | Set playback on point A |
| | Play mode set | Set vedio play in a specift time |
| | Play list | A playlist show all program |

Bottom Icon picture:



Bottom Icon :

| Name | Description |
|----------|--------------------------------------|
| Previous | Play last program |
| Reverse | Play in backward(in different speed) |
| Play | Stat or stop play video |
| Forward | Play in forward(in different speed) |
| Next | Play next program |

Music in media center



Function Description:
The function of icon is the same as this icon in video.

Setting



Function Description :

| Item | Description |
|---------------------|------------------------------------|
| Network | Network setting |
| Language and input | Set OSD language and input mehtods |
| Time and date | Set time zone and current time |
| System | Some system information on tv |
| Wifi display | Set wifi display on |
| System Upgrade | System Upgrade |
| Restore the factory | Reset the seting in default mode |
| About | About tv in formation |

Networksetting
Network status

 


Function Instructions: Show the net status .

Wired Connection




note:
press “open Ethernet” to open or close wired Connection
wireless connection

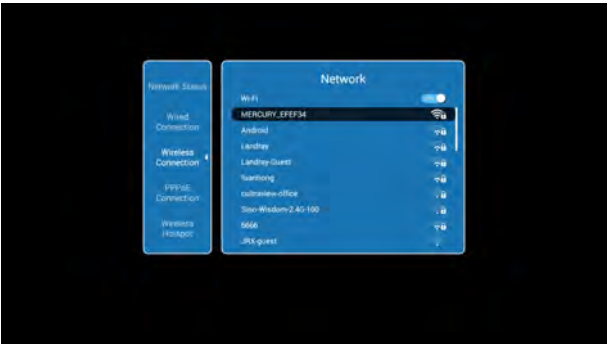




note:
press "wi-fi" to open or close wired Connection.press wifi name,then input the password to link wifi.

 PPPoE connection

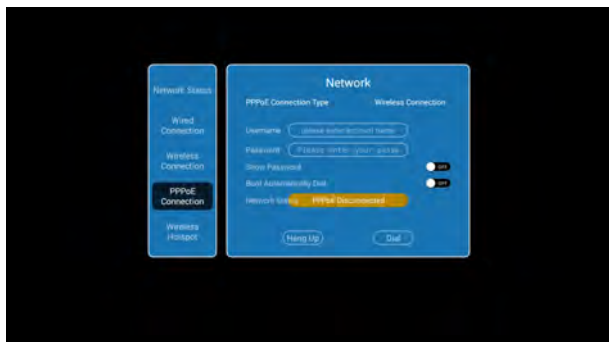

Note:
Input username and password ,the Dial ,you can connect your PPPoE account.

 Wireless hotspot

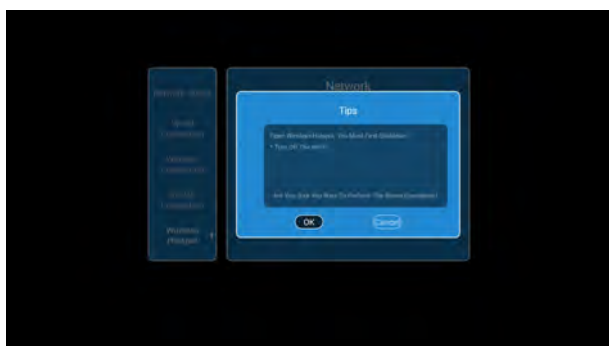


Function description:

Make you tv be a wireless hotspot to be used for other device.

Note:

First, connect a open net, secondly input your ssid and password. finally ,saved it and you can find a ssid in your phone, then you can use it.

 language and input

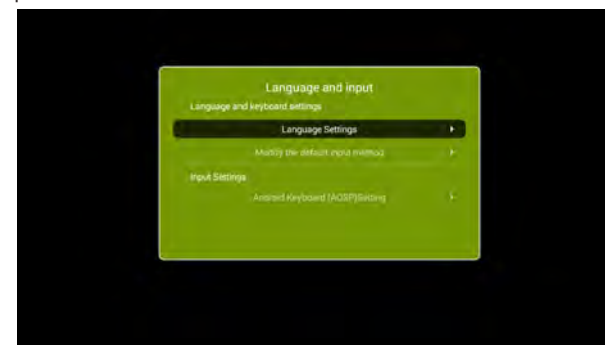


Function

Operation:

Press Column "Language Setting" to change OSD language

Press Column "Modify the default input method" to change input method

 
Time and date

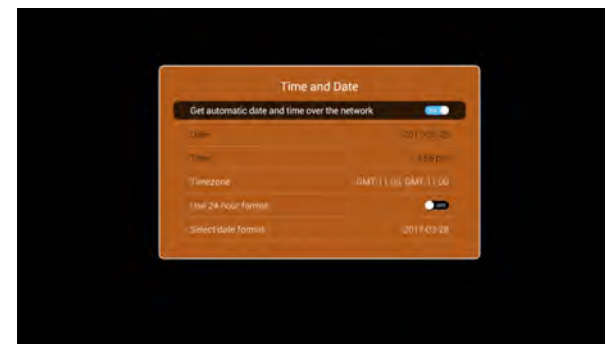

Function Description

| Column | Description |
|--------------------------------|--|
| Get time and date over network | ON: Get time and date over network OFF:get time and date over tv |
| Use 24-hour format | ON: Use 24-hour format OFF:Use 12-hour format |
| Select date format | 1:Month-Day-Year 2:Day-Month-Year 3:Year-Month-Day |
| TimeZone | Set the Timezone. Enter second menu, use UP, DOWN to set time zone:canary GMT ./Lisbn GMT / London GMT /Amsterdam GMT+1..... |

 
System

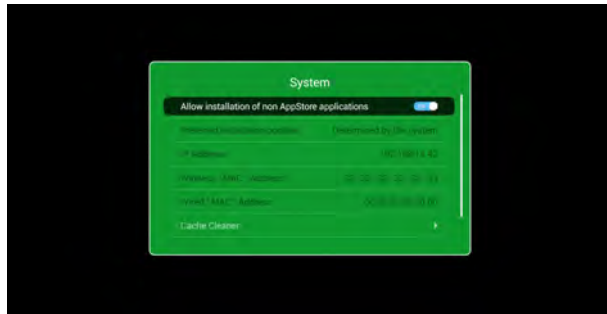

Function Description:

| Item | Description |
|---|---|
| Allow install of non appstore application | ON: Allow install of non appstore application OFF: not allow install of non appstore application |
| Cache cleaner | Clean cache |
| Google Account Manager | Show Google account information |

 
Cache cleaner picture:

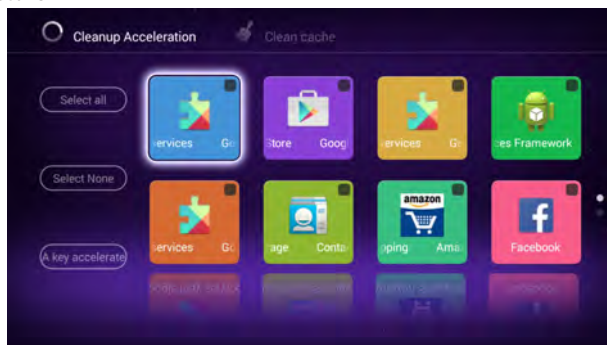

Function Instruction:

Clean cache and accelerate system.

 WIFI display

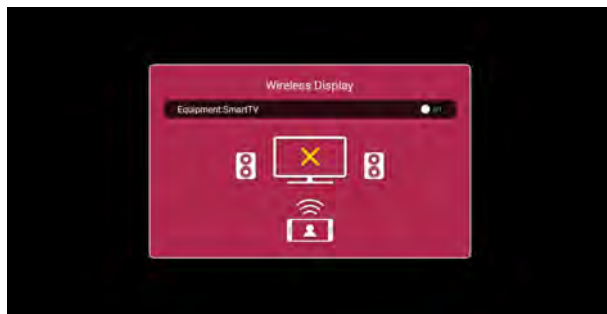

Function Description :

 
Make you phone image cast down on TV

Note:

ON: open this function.

30

System upgrade

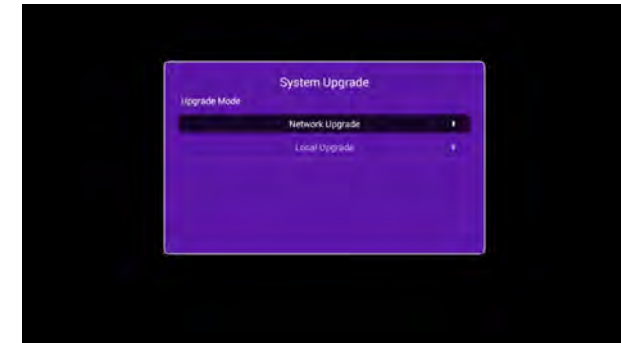

Note:

 
If use Networkupgrade ,you need connect your net first;
Local upgrade, need a upgrade bin in your USB.

Restoring the factory state:

Description:

Restore factory settings, recovering the stats after leaving factory.

About

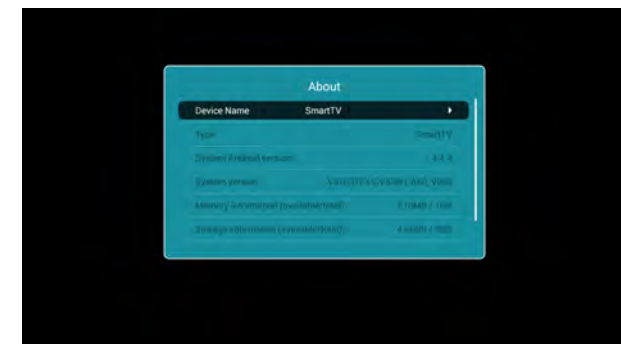


Function Description: some information about tv





| Item | Description |
|------------------------|-----------------------|
| Device Name | The name of tv device |
| Type | |
| System Android version | Android version |
| System version | Software version |
| Memory information | |
| Storage information | |
| CPU | |

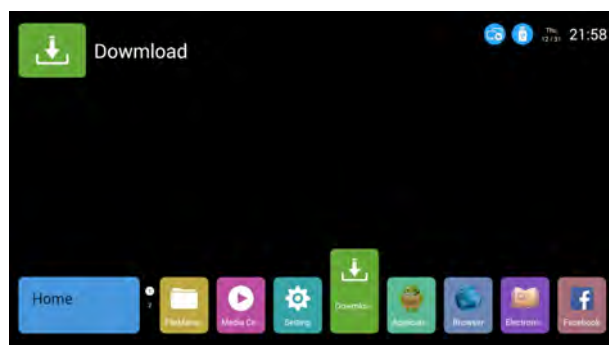 Styles

In our new Ui system, we have a new advanced functions. The basic background of Tv can change with time. The tv will change its color when the time go day or night to protect the user's eyes. Following are the night tv and night home.



Troubleshooting

| Problem | Possible cause | Possible solution |
|---|---|--|
| No picture and sound. | <ul style="list-style-type: none"> The power adaptor is not plugged in or not working. The wrong input source is selected. The input source has failed to connect with the TV or is not turned on. | <ul style="list-style-type: none"> Plug the power adaptor into a suitable outlet. Try both the 12/24V & 240V adaptors Select the correct input source. Make sure the input source is correctly connected and turned on. |
| No sound. | <ul style="list-style-type: none"> The volume control is set to minimum. The mute  button on the remote control has been pressed An incorrect sound system mode is set. | <ul style="list-style-type: none"> Press the  button to increase the volume. Press  or the (or ) button to restore/increase the volume. Set a correct sound system mode from the main menu to match your TV source. |
| No picture, or monochrome picture only. | <ul style="list-style-type: none"> The colour system setting does not match the program. The sound system setting does not match the program. | <ul style="list-style-type: none"> Select the appropriate colour system setting. Select the appropriate sound system setting. (If unsure, use Auto settings where available). |
| Sound or picture interference. | <ul style="list-style-type: none"> Some equipment that causes interference is close to the TV. More than one device is plugged into the same power outlet. An incorrect sound system mode is set. | <ul style="list-style-type: none"> Keep interference-causing equipment away from the TV. Plug the power adaptor into another, separate power outlet. Set a correct sound system mode from the main menu to match your TV source. |
| PVR recording failed, or "DISK NOT READY" is displayed. | <ul style="list-style-type: none"> You may not have removed your USB device after the last recording, which is necessary to protect the device from damage. | <ul style="list-style-type: none"> Remove the USB device after each recording if you experience recording problems. If "DISK NOT READY" is displayed, remove the device, reconnect and then proceed with your recording. |

| Problem | Possible cause | Possible solution |
|------------------------|---|---|
| DTV Picture Pixelation | <ul style="list-style-type: none"> • Poor Signal | <ul style="list-style-type: none"> • Adjust the position or orientation of the TV antenna. • Check the antenna connection from the wall plate to the TV. • Try re-tuning the channels as the channel frequencies may be different in some areas. |